

CLUB TIMER III - PACT CLUB TIMER III

[Shooting Accessories](#) > [Range Gear](#) > [Shot Timers](#)

Compact, Ergonomic Design Is Simple To Use; Ideal For Clubs Or Individuals

Compact, lightweight unit fits in the palm of your hand; provides highly accurate timer functions designed to make you a better, faster shooter. One of the very best choices for Club shoots because it is so simple and accurate to use. The rugged, impact resistant case is ergonomically designed to be easy to carry or the stainless steel clip will securely hold the unit onto your belt for individual practice sessions. The large, can't miss GO button can be set for either Delay or Instant operation. Delay Mode allows a delay from .01 second up to 99.99 second before the extra loud buzzer rings. In Instant Mode the Go button is pressed and held on the Are You Ready? command and the buzzer will sound instantly when the GO button is released. All critical shot information is shown on the digital, easy-to-read display, which can be set quickly to function in one of three different modes. Timer Mode: Displays the number of shots and time between shots, from first to last. Review Mode: Shows incremental times from the first to the last shot fired. Set Mode: Used to switch between Delay and Instant and enter or clear a PAR time. Uses a single, 9-volt battery (included), with auto power down after 15 minutes.



Attributes

- Name: [PACT CLUB TIMER III](#)
- Manufacturer: [PACT](#)
- Product no.: 100002498
- Mfr. No.: CT3
- Colour: Black
- Style: Timer
- Delivery weight: 0.227kg
- Shipping height: 61mm
- Shipping width: 122mm
- Shipping length: 147mm
- UPC: 891028000055

Item details

Made in USA

Table of Contents

- Startpage
- CLUB TIMER III PACT Safety Instructions
- About Us

CLUB TIMER III PACT Safety Instructions

Introduction

Thank you for choosing the CLUB TIMER III PACT. This compact and lightweight timer is designed to enhance your shooting practice by providing highly accurate timer functions. To ensure safe and effective use of the product, please read and follow these safety instructions carefully.

General Safety Guidelines

- Ensure safe use of the CLUB TIMER III PACT by following these general safety guidelines:
 - Always keep the timer away from water and moisture to prevent damage.
 - Do not expose the timer to extreme temperatures or direct sunlight for extended periods.
 - Keep the timer out of reach of children and vulnerable individuals.
 - Regularly inspect the device for any signs of damage or wear. If any damage is found, discontinue use immediately.
 - Use only the specified 9volt battery for operation. Do not use damaged or expired batteries.
 - Follow all operating instructions to avoid misuse and potential hazards.

Specific Safety Precautions for Use

- When using the CLUB TIMER III PACT, please adhere to the following safety precautions:
 - Ensure the timer is securely attached to your belt or in a safe location while in use.
 - Be aware of your surroundings and ensure that the area is clear of obstacles and hazards.
 - Do not attempt to modify or repair the timer. For any issues, refer to the instructions or seek professional assistance.
 - Avoid pressing the GO button while the timer is in your pocket or bag to prevent accidental activation.
 - Use the Delay Mode responsibly to avoid confusion during practice sessions. Ensure you are ready before the buzzer sounds.

Instructions for Installation and Usage

- Follow these steps for proper installation and usage of the CLUB TIMER III PACT:

1. Battery Installation:

- Open the battery compartment located at the back of the timer.
- Insert a fresh 9volt battery, ensuring the correct polarity is observed.
- Close the battery compartment securely.

2. Setting Up the Timer:

- Press the GO button to turn on the timer.
- Select the desired mode (Delay or Instant) by using the Set Mode function.
- For Delay Mode, set the delay time from 0.01 seconds to 99.99 seconds.
- In Instant Mode, press and hold the GO button until you are ready to start.

3. Using the Timer:

- Ensure you are in a safe and clear area before starting your practice.
- When ready, press the GO button to initiate the timer.
- The timer will count down or start counting shots based on the selected mode.

- Monitor the digital display for shot information and timing.

4. Powering Down:

- The timer will automatically power down after 15 minutes of inactivity to conserve battery life.
- To turn off the timer manually, press and hold the GO button until the display turns off.

Disposal Instructions

- Proper disposal of the CLUB TIMER III PACT and its components is important for environmental safety:
 - Dispose of the timer in accordance with local electronic waste regulations.
 - Remove the battery before disposal and recycle it according to local guidelines.
 - Do not throw the timer or battery in regular household waste.

Contact Information for Further Support

- For any safety inquiries or support regarding the CLUB TIMER III PACT, please refer to the contact information provided in the product packaging or user manual.

By following these safety instructions, you can ensure a safe and enjoyable experience while using the CLUB TIMER III PACT. Thank you for your attention to these important guidelines.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk