

# LOCK-N-LOAD BALANCE BEAM SCALE - HORNADY LOCK-N-LOAD BEAM SCALE

[Reloading](#) > [Powder Handling](#) > [Powder Scales](#)

Handloaders who prefer a traditional analog scale for powder measurement will love the Hornady® Lock-N-Load® Beam Scale. This high tolerance scale is consistent to within 1/10th of a grain. The scale can be precisely adjusted to balance the powder pan, and measurements are easy to read on the laser etched beam. Made in the U.S.A.



## Attributes

- Name: [HORNADY LOCK-N-LOAD BEAM SCALE](#)
- Manufacturer: [HORNADY](#)
- Product no.: 100012033
- Mfr. No.: 050109
- Delivery weight: 0.522kg
- Shipping height: 64mm
- Shipping width: 152mm
- Shipping length: 296mm
- UPC: 090255501094

## Item details

Made in USA

# Table of Contents

- Startpage
- LOCKNLOAD BALANCE BEAM SCALE SAFETY INSTRUCTIONS
- About Us

# LOCKNLOAD BALANCE BEAM SCALE SAFETY INSTRUCTIONS

## Introduction

Thank you for choosing the Hornady® LockNLoad® Beam Scale. This manual provides essential safety instructions to ensure the safe and effective use of your scale. Please read this guide thoroughly before using the product.

## General Safety Guidelines

- Ensure that the scale is used in a welllit and stable environment to avoid accidents.
- Keep the scale out of reach of children and pets to prevent misuse and potential injuries.
- Always handle the scale with care to avoid dropping or damaging it.
- Store the scale in a safe place when not in use to maintain its accuracy and longevity.
- If you notice any damage or malfunction, do not use the scale and contact customer support for assistance.

## Specific Safety Precautions for Use

- Do not exceed the maximum weight capacity of the scale, which is designed for precise powder measurements.
- Avoid placing any foreign objects on the scale that may interfere with the measurement process.
- Ensure that the powder pan is properly balanced before taking measurements to avoid inaccuracies.
- Do not use the scale in extreme temperatures or humid conditions, as this may affect its performance.
- Regularly check the calibration of the scale to ensure accurate readings. Follow the manufacturer's instructions for recalibration.

## Instructions for Installation and Usage

### 1. Setting Up the Scale:

- Place the scale on a flat, stable surface away from vibrations or disturbances.
- Ensure that the scale is level. Adjust the feet if necessary to achieve balance.

### 2. Using the Scale:

- Turn the scale on and allow it to warm up for a few minutes if applicable.
- Place the empty powder pan on the scale and ensure it is balanced.
- Add the desired amount of powder to the pan slowly and carefully.
- Read the measurement from the laseretched beam, ensuring your eyes are at the same level as the scale for accuracy.
- After use, remove the powder pan and turn off the scale if it has a power switch.

### 3. Regular Maintenance:

- Clean the scale using a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Store the scale in its original packaging or a protective case to prevent dust accumulation and physical damage.

## **Disposal Instructions**

- Dispose of the scale in accordance with local regulations. Do not dispose of it with regular household waste.
- If the scale is damaged beyond repair, consider recycling its components where facilities exist.

## **Contact Information for Further Support**

For any questions or concerns regarding the safety and usage of your Hornady® LockNLoad® Beam Scale, please reach out to your local Hornady representative or authorized dealer.

## **Conclusion**

By following these safety instructions, you can ensure a safe and effective experience with your Hornady® LockNLoad® Beam Scale. Thank you for your commitment to safety and quality in your handloading activities.

# About Us

## **Brownells Česká republika**

**Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

[www.brownells.cz](http://www.brownells.cz)