

FIRING PIN SPACER SLEEVE - KE ARMS FIRING PIN SPACER SLEEVE

[Handgun Parts](#) > [Action Parts](#) > [Firing Pin Parts](#) > [Firing Pin Hardware](#)

Aftermarket Glock striker spacer sleeve. Made in the USA.



Attributes

- Name: [KE ARMS FIRING PIN SPACER SLEEVE](#)
- Manufacturer: [KE ARMS](#)
- Product no.: 100023130
- Mfr. No.: 1-50-25-002
- Model: 22,36,17,33,19,34,23,32,26,27,31
- Weapon type: Glock
- Delivery weight: 0.045kg
- Shipping height: 3mm
- Shipping width: 64mm
- Shipping length: 76mm

Item details

Made in USA

Table of Contents

- Startpage
- Firing Pin Spacer Sleeve Safety Instructions
- About Us

Firing Pin Spacer Sleeve Safety Instructions

Introduction

Thank you for choosing the Firing Pin Spacer Sleeve by KE ARMS. This product is designed to enhance the performance of your Glock firearm models (36, 17, 19, 22, 23, 34, 26, 27, 31, 32, 33). To ensure safe and effective use, please read and follow these safety instructions carefully.

General Safety Guidelines

- Always ensure that your firearm is unloaded before installing or handling the firing pin spacer sleeve.
- Keep the product out of reach of children and unauthorized users.
- Inspect the firing pin spacer sleeve for any signs of damage or wear before each use.
- Follow all local laws and regulations regarding firearm modifications and accessories.
- Always use the product in accordance with the manufacturer's guidelines and recommendations.

Specific Safety Precautions for Use

- Do not use the firing pin spacer sleeve if it is damaged or shows signs of wear.
- Ensure that the spacer sleeve is compatible with your specific Glock model before installation.
- Avoid exposing the spacer sleeve to extreme temperatures or harsh chemicals that may affect its integrity.
- Use protective eyewear when handling or installing the firing pin spacer sleeve to prevent injury from accidental discharges.

Instructions for Installation and Usage

1. Prepare Your Firearm

- Ensure your Glock is unloaded and pointed in a safe direction.
- Remove the slide from the frame of the firearm.

2. Install the Firing Pin Spacer Sleeve

- Locate the firing pin assembly in your Glock.
- Carefully remove the existing spacer if applicable.
- Insert the KE ARMS firing pin spacer sleeve into the designated area, ensuring a snug fit.
- Reassemble the slide onto the frame of the firearm.

3. Check Functionality

- Once the installation is complete, perform a function check to ensure the firearm operates correctly.
- Test the trigger mechanism without ammunition to confirm the spacer sleeve is functioning as intended.

4. Regular Maintenance

- Periodically inspect the firing pin spacer sleeve for wear and tear.
- Clean the sleeve and surrounding areas as part of your regular firearm maintenance.

Disposal Instructions

- Dispose of any damaged or worn firing pin spacer sleeves in accordance with local waste disposal

regulations.

- Do not dispose of the product in a manner that could pose a risk to the environment or public safety.

Contact Information for Further Support

For any safety inquiries or additional support regarding the Firing Pin Spacer Sleeve, please contact the manufacturer directly. Ensure to have your product details on hand for reference.

Conclusion

By following these safety instructions, you can enhance your shooting experience while ensuring the safe use of your Firing Pin Spacer Sleeve. Stay informed about product recalls and safety updates through the EU's Safety Gate platform to ensure continued safety in your firearm practices.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk