

SPRING LOADED BEARING FOR GLOCK® GEN 3 - SHADOW SYSTEMS SPRING LOADED BEARING FOR GLOCK GEN 3

[Handgun Parts](#) > [Action Parts](#) > [Firing Pin Parts](#) > [Firing Pin Locks](#)

The Shadow Gunworks Nylon Spring Loaded Bearing fits the extractor depressor plunger assembly on a Glock Gen 3 pistol. Part molded from Nylon 6 material. Fits Glock Gen 3, models 17, 19, 22, 23, 26, 27, 34, 35



Attributes

- Name: [SHADOW SYSTEMS SPRING LOADED BEARING FOR GLOCK GEN 3](#)
- Manufacturer: [SHADOW SYSTEMS](#)
- Product no.: 100024247
- Mfr. No.: SG9C-01-14
- Model: 19,23,26,34,35,27,17,22
- Weapon type: Glock
- Delivery weight: 0.045kg
- Shipping height: 25mm
- Shipping width: 25mm
- Shipping length: 25mm
- UPC: 853687007530

Item details

Made in USA

US export classification: 0A501.x

Table of Contents

- Startpage
- Safety Instruction Guide for Spring Loaded Bearing for Glock® Gen 3
- About Us

Safety Instruction Guide for Spring Loaded Bearing for Glock® Gen 3

Introduction

Thank you for choosing the Spring Loaded Bearing for Glock® Gen 3 by Shadow Gunworks. This guide provides important safety information, installation instructions, and usage guidelines to ensure safe operation and maintenance of your product. Please read this guide carefully before use.

General Safety Guidelines

- Ensure that the product is compatible with your Glock Gen 3 model (17, 19, 22, 23, 26, 27, 34, 35).
- Always handle firearms and their components with care and follow all applicable laws and regulations.
- Keep the product out of reach of children and unauthorized users.
- Inspect the product regularly for signs of wear or damage. Do not use a damaged product.
- Be aware of your surroundings when using your firearm, and ensure that it is pointed in a safe direction at all times.
- Report any unsafe products or accidents to the appropriate authorities.
- Check for recall updates on the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Do not attempt to modify the Spring Loaded Bearing or any part of your firearm.
- Always wear appropriate safety gear, such as eye protection, when handling firearms.
- Ensure that the firearm is unloaded before installing or removing the Spring Loaded Bearing.
- Follow the manufacturer's instructions for your specific Glock model when installing the Spring Loaded Bearing.
- Be cautious of potential pinch points during installation.

Instructions for Installation and Usage

1. Preparation:

- Ensure that your Glock Gen 3 pistol is completely unloaded.
- Gather necessary tools for installation (if applicable).

2. Installation Steps:

- Remove the slide from the frame of the pistol according to the manufacturer's instructions.
- Locate the extractor depressor plunger assembly.
- Carefully remove the existing bearing if applicable.
- Insert the new Spring Loaded Bearing into the extractor depressor plunger assembly.
- Ensure that the bearing is seated properly and securely.
- Reassemble the slide onto the frame following the manufacturer's instructions.

3. Usage:

- After installation, conduct a function check to ensure the firearm operates correctly.
- Regularly inspect the Spring Loaded Bearing for wear and replace as necessary.

Disposal Instructions

- Dispose of the product in accordance with local regulations for plastic materials.
- Do not dispose of the product in regular household waste.
- Consider recycling options where available.

Contact Information for Further Support

For any questions or concerns regarding the Spring Loaded Bearing for Glock® Gen 3, please refer to the manufacturer's website or contact their customer support for assistance.

Thank you for your attention to these safety guidelines. Your safety and satisfaction are our top priorities.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk