

MARKSMAN 300 YARD TARGET CAMERA - LONGSHOT TARGET CAMERAS MARKSMAN CAMERA 300 YARD + UHD

[Optics & Mounting](#) > [Action Cameras](#) > [Cameras](#)

While long-range shooting has become more popular with today's rifle owners, most casual shooting is still done under 300 yards. However, for lower-power guns like rimfires and handguns, spotting shot impacts can be difficult at shorter ranges. That's why the LONGSHOT Marksman 300-Yard Target Camera is worth adding to your range kit. Each LONGSHOT Marksman 300-Yard Target Camera is a wireless, portable, battery-powered system that can be set up anywhere, as long as it sits 10-15 feet back from your target. Since the camera is positioned down near the target, dealing with mirage when spotting shots isn't an issue anymore. Plus, the system requires no cell service or Wi-Fi for use, so you can view live HD video anywhere. Each LONGSHOT Marksman 300-Yard Target Camera can run up to 12 hours continuously and features a Blinker Shot Locator and CrispEdge 2688 x 1512 HD image resolution. The system can accommodate up to three additional cameras, with each camera viewable through the company's TargetVision app. The app also allows shooters to track and number shots in addition to saving photos, reviewing sessions and recording videos and stills.



Attributes

- Name: [LONGSHOT TARGET CAMERAS MARKSMAN CAMERA 300 YARD + UHD](#)
- Manufacturer: [LONGSHOT TARGET CAMERAS](#)
- Product no.: 100038718
- Mfr. No.: TV-CF203
- Colour: Gray
- Delivery weight: 2.037kg
- Shipping height: 152mm
- Shipping width: 330mm
- Shipping length: 254mm
- UPC: 656114673007

Table of Contents

- Startpage
- MARKSMAN 300 YARD TARGET CAMERA Safety Instruction Guide
- About Us

MARKSMAN 300 YARD TARGET CAMERA Safety Instruction Guide

Introduction

Thank you for choosing the MARKSMAN 300 Yard Target Camera. This guide provides important safety information and instructions to ensure the safe and effective use of your target camera. Please read this guide carefully before using the product.

General Safety Guidelines

- Ensure that the product is used only as intended, following the instructions provided in this guide.
- Keep the product out of reach of children and vulnerable individuals to prevent accidents.
- Regularly inspect the product for any signs of damage or wear. Do not use if damaged.
- If you notice any malfunction or irregular operation, discontinue use immediately and seek assistance.
- Always follow local laws and regulations regarding the use of cameras and shooting equipment.

Specific Safety Precautions for Use

- Avoid using the camera in adverse weather conditions, such as heavy rain or strong winds, as this may affect performance and safety.
- Ensure the camera is positioned at least 1015 feet away from the target to avoid any potential hazards.
- Do not attempt to modify or repair the camera yourself. Contact a qualified technician for any repairs.
- Use the camera in a safe shooting environment, ensuring that the area is clear of bystanders and obstacles.
- Be aware of your surroundings and ensure that no one is in the line of fire when shooting.

Instructions for Installation and Usage

1. Setting Up the Camera

- Choose a location that is at least 1015 feet from the target area.
- Ensure the ground is stable and level for the best performance.
- Unpack the camera and check that all components are included.
- Charge the camera fully before first use to ensure maximum battery life.

2. Connecting to the TargetVision App

- Download the TargetVision app from your device's app store.
- Follow the app's instructions to connect to your camera wirelessly.
- Ensure your device has a stable internet connection for optimal performance.

3. Using the Camera

- Turn on the camera using the power button.
- Use the app to view live HD video from the camera.
- Utilize the Blinker Shot Locator feature to track shot impacts effectively.
- Remember to save photos and videos as needed through the app.

4. Monitoring Battery Life

- The camera can run continuously for up to 12 hours. Monitor battery levels using the app.
- Recharge the camera as needed to ensure uninterrupted use.

Disposal Instructions

- Dispose of the camera and its components in accordance with local regulations for electronic waste.
- Do not dispose of the camera in regular household waste.
- Remove any batteries and dispose of them properly according to local guidelines.

Contact Information for Further Support

For any safety inquiries or support regarding the MARKSMAN 300 Yard Target Camera, please refer to the manufacturer's contact options provided in the product documentation or on the official website.

Conclusion

By following these safety instructions, you can ensure a safe and enjoyable experience with your MARKSMAN 300 Yard Target Camera. Always prioritize safety and adhere to the guidelines provided in this document. Thank you for your attention and enjoy your shooting experience!

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk