

AR-15 EXTRACTOR SPRING - CMMG AR-15 EXTRACTOR SPRING

[Rifle Parts](#) > [Bolt Parts](#) > [Extractor Parts](#) > [Extractor Springs](#)

Replacement AR-15 Extractor Spring.



Attributes

- Name: [CMMG AR-15 EXTRACTOR SPRING](#)
- Manufacturer: [CMMG](#)
- Product no.: 100044647
- Mfr. No.: 55BA424
- Weapon type: AR-15
- Delivery weight: 0.009kg
- Shipping height: 6mm
- Shipping width: 121mm
- Shipping length: 178mm
- UPC: 810046234761

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [AR15 Extractor Spring Safety Instructions](#)
- [About Us](#)

AR15 Extractor Spring Safety Instructions

Introduction

Thank you for choosing the AR15 Extractor Spring by CMMG. This product is designed to ensure optimal performance and reliability in your AR15 firearm. However, it is essential to follow safety guidelines to ensure safe use and maintenance. This instruction guide provides important safety information, installation instructions, and disposal guidelines in compliance with the EU General Product Safety Regulation (GPSR).

General Safety Guidelines

- Always handle firearms and their components with care.
- Ensure that the firearm is unloaded before performing any maintenance or installation.
- Keep the product out of reach of children and vulnerable individuals.
- Regularly check for product recalls on the EU's Safety Gate platform.
- Report any unsafe products or accidents to the relevant authorities.

Specific Safety Precautions for Use

- Ensure that the AR15 Extractor Spring is compatible with your specific AR15 model.
- Inspect the spring for any signs of damage or wear before installation.
- Do not attempt to modify or alter the extractor spring in any way.
- Always wear safety glasses when working on or around firearms.
- Follow the manufacturer's guidelines for proper firearm maintenance.

Instructions for Installation and Usage

1. Preparation

- Gather all necessary tools, including a punch tool and a hammer.
- Ensure your workspace is clean and free from distractions.

2. Installation Steps

- Make sure the firearm is unloaded and remove the upper receiver from the lower receiver.
- Carefully remove the existing extractor spring using a punch tool to push out the retaining pin.
- Take the new AR15 Extractor Spring and insert it into the extractor.
- Ensure the spring is seated properly and securely.
- Reinsert the retaining pin to hold the extractor spring in place.
- Reattach the upper receiver to the lower receiver.

3. PostInstallation Check

- Conduct a function check to ensure the extractor operates correctly.
- Test the firearm in a safe and controlled environment before regular use.

Disposal Instructions

- Dispose of the old extractor spring in accordance with local regulations.
- Do not dispose of the product in regular household waste.
- Check for any recycling programs in your area that accept metal components.

Contact Information for Further Support

For any inquiries related to the AR15 Extractor Spring, please refer to the manufacturer's contact information provided with the product packaging or on the manufacturer's official website.

By following these safety instructions, you can ensure safe and effective use of your AR15 Extractor Spring. Thank you for your attention to these important guidelines.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk