

AR15A4 TRIGGER SPRING - TRIGGER SPRING FOR COLT AR15-A4

[Rifle Parts](#) > [Triggers Parts](#) > [Trigger Hardware](#) > [Trigger Springs](#)

FITS: AR-15 - Common Parts; M16/M4, .223, Auto Full

AR15A4 TRIGGER SPRING



Attributes

- Name: [TRIGGER SPRING FOR COLT AR15-A4](#)
- Manufacturer: [COLT](#)
- Product no.: 160305107
- Mfr. No.: SP61657
- Model: AR-15,AR-15/M4,M16
- Weapon type: Colt,AR-15
- Delivery weight: 0.005kg
- Shipping width: 83mm
- Shipping length: 146mm

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [AR15A4 Trigger Spring Safety Instructions](#)
- [About Us](#)

AR15A4 Trigger Spring Safety Instructions

Introduction

Thank you for choosing the AR15A4 Trigger Spring designed for Colt AR15A4 models. This safety instruction guide provides essential information to ensure the safe and effective use of the product. Please read this guide carefully before installation and usage.

General Safety Guidelines

- Ensure the product is suitable for your specific firearm model (AR15/M4, M16, AR15).
- Always handle firearms with care and in accordance with local laws and regulations.
- Store the trigger spring in a safe, dry place away from children and unauthorized users.
- Regularly inspect the trigger spring for signs of wear or damage before each use.
- If you experience any issues or malfunctions during use, cease operation immediately and consult a qualified gunsmith.

Specific Safety Precautions for Use

- Always wear appropriate personal protective equipment (PPE) such as safety goggles when handling firearm components.
- Do not modify the trigger spring or any related components, as this may lead to unsafe operation.
- Ensure that the firearm is unloaded and the chamber is clear before installing or removing the trigger spring.
- Keep fingers and other body parts clear of the trigger area when handling the firearm.
- Be aware of your surroundings and ensure a safe environment when using your firearm.

Instructions for Installation and Usage

1. Preparation:

- Gather all necessary tools for installation, including a gunsmithing screwdriver set.
- Ensure that the firearm is unloaded and pointed in a safe direction.

2. Installation Steps:

- Remove the upper receiver from the lower receiver of the AR15.
- Locate the trigger assembly and carefully remove the existing trigger spring.
- Insert the AR15A4 Trigger Spring into the designated slot in the trigger assembly.
- Ensure the spring is seated properly and securely.

3. Reassembly:

- Reattach the upper receiver to the lower receiver.
- Conduct a function check to ensure the trigger operates smoothly and safely.

4. Usage:

- When using the firearm, always follow standard firearm safety rules.
- Regularly check the functionality of the trigger and spring during use.

Disposal Instructions

- Dispose of the trigger spring in accordance with local regulations regarding metal and firearm

components.

- Do not dispose of the trigger spring in regular household waste.
- Consider recycling options where available to minimize environmental impact.

Contact Information for Further Support

For questions or concerns regarding the AR15A4 Trigger Spring, please refer to the manufacturer's website or contact your local dealer for assistance.

By following these safety instructions, you can help ensure a safe and enjoyable experience with your Colt AR15A4. Thank you for your attention to safety!

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk