

AR15A4 SPRING, EXTRACTOR - COLT AR15A4 SPRING, EXTRACTOR

[Rifle Parts](#) > [Bolt Parts](#) > [Extractor Parts](#) > [Extractor Springs](#)

FITS: AR-15 - Common Parts

AR15A4 SPRING, EXTRACTOR



Attributes

- Name: [COLT AR15A4 SPRING, EXTRACTOR](#)
- Manufacturer: [COLT](#)
- Product no.: 160308266
- Mfr. No.: 64972
- Weapon type: AR-15
- Delivery weight: 0.045kg
- Shipping height: 25mm
- Shipping width: 25mm
- Shipping length: 25mm

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [Safety Instruction Guide for AR15A4 Extractor Spring](#)
- [About Us](#)

Safety Instruction Guide for AR15A4 Extractor Spring

Introduction

Thank you for choosing the AR15A4 Extractor Spring by Colt. This guide provides essential safety instructions and information to ensure the safe use and installation of this product. Please read this manual carefully before use to understand the potential hazards and safety precautions.

General Safety Guidelines

- Always follow the manufacturer's instructions for use and installation.
- Inspect the product for any visible damage before use. Do not use if damaged.
- Keep the product out of reach of children and vulnerable individuals.
- Use the product only for its intended purpose.
- Report any unsafe products or accidents to the relevant authorities.
- Stay informed about product recalls by checking the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Wear appropriate safety gear when handling the product, including gloves and eye protection.
- Ensure that the firearm is unloaded and pointed in a safe direction during installation or maintenance.
- Do not modify or alter the extractor spring in any way.
- Be aware of the potential for springs to eject unexpectedly when installing or removing.
- Follow all local laws and regulations regarding firearm parts and accessories.

Instructions for Installation and Usage

1. Preparation:

- Gather all necessary tools and safety equipment.
- Ensure the working area is clean and free from distractions.

2. Installation:

- Make sure the firearm is unloaded and pointed in a safe direction.
- Remove the old extractor spring if applicable, following the manufacturer's guidelines.
- Carefully install the new AR15A4 Extractor Spring, ensuring it is seated correctly.
- Doublecheck the installation to confirm that the spring is secure and properly aligned.

3. Usage:

- Test the firearm in a safe environment to ensure proper functionality.
- Regularly inspect the extractor spring for wear and tear during routine maintenance.

4. PostUse:

- Clean the area and tools used during installation.
- Store the firearm and any accessories in a secure location.

Disposal Instructions

- Dispose of any used or damaged extractor springs in accordance with local regulations.

- Do not dispose of the product in regular household waste.
- Consider recycling options if available.

Contact Information for Further Support

For more information or assistance regarding the AR15A4 Extractor Spring, please refer to the manufacturer's website or customer support resources.

By following these safety guidelines and instructions, you can ensure the safe and effective use of the AR15A4 Extractor Spring. Thank you for your attention to safety.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk