

DRUM SANDER BANDS #408, 432 - DREMEL #408 BAND

[Gunsmith Tools](#) > [Power Tools & Accessories](#) > [Drum Sanders](#)

Make The Most Of Your Hand-Held Tool

½" (12.7mm) dia. coarse grit; No. 432, ½" dia. fine grit. Pak of 6.



Attributes

- Name: [DREMEL #408 BAND](#)
- Manufacturer: [DREMEL](#)
- Product no.: 257400408
- Mfr. No.: 5000408
- Delivery weight: 0.011kg
- Shipping height: 20mm
- Shipping width: 46mm
- Shipping length: 79mm
- UPC: 080596004088

Table of Contents

- Startpage
- Safety Instruction Guide for DRUM SANDER BANDS #408, 432 DREMEL #408 BAND
- About Us

Safety Instruction Guide for DRUM SANDER BANDS #408, 432 DREMEL #408 BAND

Introduction

Thank you for choosing the DRUM SANDER BANDS #408, 432 DREMEL #408 BAND. This guide provides essential safety information to ensure the safe and effective use of this product. Please read and follow these instructions carefully to avoid accidents and injuries.

General Safety Guidelines

- Always use the product in accordance with the manufacturer's instructions.
- Keep the product out of reach of children and vulnerable individuals.
- Inspect the product before use for any signs of damage or wear.
- Use personal protective equipment (PPE) such as safety goggles, dust masks, and hearing protection when operating power tools.
- Ensure a clean and organized workspace to minimize risks of accidents.
- Do not use the product in wet or damp conditions.
- Report any unsafe products or incidents to the relevant authorities.

Specific Safety Precautions for Use

- Use only with compatible DREMEL tools.
- Ensure that the sander bands are securely attached before use.
- Do not exceed the maximum recommended speed for the tool.
- Avoid prolonged exposure to dust generated during sanding; use appropriate dust extraction methods.
- Do not force the tool; let it work at its own pace.
- Be aware of your surroundings and keep bystanders at a safe distance while operating the tool.

Instructions for Installation and Usage

1. Installation:

- Ensure the tool is unplugged before installing the sander bands.
- Remove any existing bands from the tool.
- Select the appropriate grit (coarse or fine) based on your project needs.
- Carefully slide the new sander band onto the drum of the tool.
- Secure the band according to the manufacturer's instructions.

2. Usage:

- Plug in the tool and allow it to reach the desired speed before making contact with the material.
- Hold the tool firmly and apply light, even pressure while sanding.
- Move the tool steadily across the surface without lingering in one spot to prevent overheating.
- Regularly check the band for wear and replace it as necessary.

Disposal Instructions

- Dispose of used sander bands in accordance with local waste management regulations.
- Do not dispose of electrical components in household waste; take them to a designated recycling facility.
- Ensure that packaging materials are recycled or disposed of properly.

Contact Information for Further Support

For any inquiries regarding safety or product performance, please reach out to the manufacturer's customer service or visit their official website for more information.

By following these safety instructions, you can help ensure a safe and effective experience with your DRUM SANDER BANDS #408, 432 DREMEL #408 BAND. Thank you for your attention to safety.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk