

OPTICS INTERFACE PLATE FOR S&W M&P 2.0 - FORWARD CONTROLS DESIGN SMITH & WESSON M&P 2.0 OPTICS INTERFACE PLATE

[Optics & Mounting](#) > [Electronic Sights](#) > [Mounting Hardware](#)

Precision machined in 4140 and black nitride coated, OPF-SW, ACRO is the latest collaboration between Tangodown and Forward Controls. Continuing the tradition of reliable duty grade, precision machined steel optics interface plates in both companies' line up, OPF-SW, ACRO is made for Smith & Wesson M&P CORE 2.0 pistols. Tight tolerances reduce the plate's movement on the slide, and the sight's movement on the plate, but that alone sometimes isn't enough. For older sights like RMR that have fairly loose tolerances, the fences on the plate are designed to cradle it and hold it immobile. Newer sights like DPP and RMRcc don't need the fences, Forward Controls Design still incorporate them whenever possible. Torque value for included 6-32 x 1/4 T15 plate to slide screws: 13 to 15 in ·lb. Torque value for Aimpoint ACRO P1/P2: 26 in ·lb. Torque value for Steiner MPS: 13 to 22 in ·lb. Weight: 1.49 oz Material: 4140 Steel; black nitride coated Made in USA.



Attributes

- Name: [FORWARD CONTROLS DESIGN SMITH & WESSON M&P 2.0 OPTICS INTERFACE PLATE](#)
- Manufacturer: [FORWARD CONTROLS DESIGN](#)
- Product no.: 430103594
- Mfr. No.: OPF-SW, ACRO
- Colour: Black
- Fits / Used For: Aimpoint ACRO P2
- Height: 0.9"
- Model: M&P M2.0
- Weapon type: Smith & Wesson
- Weight: 1.47 lbs
- Delivery weight: 0.907kg
- Shipping height: 25mm
- Shipping width: 83mm
- Shipping length: 140mm
- UPC: 697566711206

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for OPTICS INTERFACE PLATE FOR S&W M&P 2.0
- About Us

Safety Instruction Guide for OPTICS INTERFACE PLATE FOR S&W M&P 2.0

Introduction

Thank you for purchasing the OPTICS INTERFACE PLATE FOR S&W M&P 2.0. This product is designed to enhance your shooting experience by providing a reliable and secure mounting solution for optics. Please read this safety instruction guide carefully to ensure safe and effective use of the product.

General Safety Guidelines

- Ensure that the product is compatible with your firearm model before installation.
- Always handle firearms responsibly and in accordance with local laws and regulations.
- Keep the product out of reach of children and unauthorized users.
- Regularly inspect the product for wear or damage before each use.
- Report any unsafe product conditions to the appropriate authorities.
- Stay informed about product recalls by checking the EU's Safety Gate platform.

Specific Safety Precautions for Use

- **Compatibility Check:** Verify that the OPTICS INTERFACE PLATE is specifically designed for the Smith & Wesson M&P CORE 2.0 pistols.
- **Torque Specifications:**
 - Use a torque value of 13 to 15 in·lb for the included 632 x ¼ T15 plate to slide screws.
 - For Aimpoint ACRO P1/P2, use a torque value of 26 in·lb.
 - For Steiner MPS, use a torque value of 13 to 22 in·lb.
- **Sight Installation:** Ensure that sights with loose tolerances, such as RMR, are properly cradled by the fences on the plate to avoid movement.
- **Regular Maintenance:** Periodically check the tightness of screws and the integrity of the mounting plate.

Instructions for Installation and Usage

1. Preparation:

- Gather all necessary tools, including a torque wrench and compatible screwdriver.
- Ensure that the firearm is unloaded and pointed in a safe direction.

2. Installing the Plate:

- Align the OPTICS INTERFACE PLATE with the mounting points on the slide of your Smith & Wesson M&P CORE 2.0.
- Insert the screws into the designated holes and handtighten them.

3. Applying Torque:

- Using a torque wrench, apply the specified torque values as mentioned in the safety precautions.
- Doublecheck to ensure that the plate is securely fastened to the slide.

4. Mounting the Optic:

- Follow the manufacturer's instructions for your specific optic when mounting it to the interface plate.

- Ensure that any additional screws are also torqued to the manufacturer's specifications.

5. Final Checks:

- After installation, check for any movement of the plate and the optic.
- Make sure that the optic is securely mounted and does not shift during use.

Disposal Instructions

- Dispose of the product in accordance with local regulations concerning electronic and metal waste.
- Do not dispose of the product in regular household waste.
- If necessary, contact your local waste management authority for proper disposal methods.

Contact Information for Further Support

For any inquiries related to the safety and performance of the OPTICS INTERFACE PLATE, please consult the manufacturer or your retailer.

By following these guidelines and instructions, you can ensure the safe and effective use of your OPTICS INTERFACE PLATE FOR S&W M&P 2.0. Always prioritize safety and responsible handling of firearms.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk