

ADJUSTABLE INCLINATION MOUNT - ERATAC ADJUSTABLE INCLINATION MOUNT FOR 34MM SCOPE, LEVER SYSTEM

[Optics & Mounting](#) > [Rings, Mounts & Bases](#) > [Mount Sets](#)

New GEN-2 with lightweight lever or nut system. Up to 7% lighter. Often the range of elevation adjustment of the scope is not the adequate to compensate for the bullet drop at long ranges. This scope mount was developed to offset the missing adjustment range of the scope. The inclination of the scope mount can be adjusted individually in steps of 10 from 0 - 70 MOA. The mount and the rifle scope can remain on the rifle. Self-locking thread inserts ensure permanent and stable seating of both bolted connections. Eratac guarantee 100% repeatability and shot strength. The upper and lower part of the mount are securely connected to each other by a screw running across the hand wheel diagonally. The hinge is designed as a solid tapered joint and ensures play-free seating of the components. NEW: The mount is now also supplied with a dial in mrad/MIL. The inclination can be changed in steps of 5 between 0 - 20 mrad/MIL. A Dozen Reasons for ERATAC Mounts: Machined from solid high-grade aluminum Hard anodized, matte black Made acc. to Mil-Spec. Type III Rust-proof components 100% repeatability Immediate return to zero! Tested up to cal. .50 BMG Available in many heights for different weapons and scopes With or without inclination for long-range shooting Rings with UNIVERSAL interface for attaching various tactical accessories Clamping system manufactured acc. to NATO-STANAG 4694, compatible with Mil-Std. 1913 Locking by either safety levers or hexagonal nuts without losable parts 100% made in Germany



New GEN-2 with lightweight lever or nut system. Up to 7% lighter. Often the range of elevation adjustment of the scope is not the adequate to compensate for the bullet drop at long ranges. This scope mount was developed to offset the missing adjustment range of the scope. The inclination of the scope mount can be adjusted individually in steps of 10 from 0 - 70 MOA. The mount and the rifle scope can remain on the rifle. Self-locking thread inserts ensure permanent and stable seating of both bolted connections. Eratac guarantee 100% repeatability and shot strength. The upper and lower part of the mount are securely connected to each other by a screw running across the hand wheel diagonally. The hinge is designed as a solid tapered joint and ensures play-free seating of the components. NEW: The mount is now also supplied with a dial in mrad/MIL. The inclination can be changed in steps of 5 between 0 - 20 mrad/MIL. A Dozen Reasons for ERATAC Mounts: Machined from solid high-grade aluminum Hard anodized, matte black Made acc. to Mil-Spec. Type III Rust-proof components 100% repeatability Immediate return to zero! Tested up to cal. .50 BMG Available in many heights for different weapons and scopes With or without inclination for long-range shooting Rings with UNIVERSAL interface for attaching various tactical accessories Clamping system manufactured acc. to NATO-STANAG 4694, compatible with Mil-Std. 1913 Locking by either safety levers or hexagonal nuts without losable parts 100% made in Germany

Attributes

- Name: [ERATAC ADJUSTABLE INCLINATION MOUNT FOR 34MM SCOPE, LEVER SYSTEM](#)
- Manufacturer: [ERATAC](#)
- Product no.: 430105685

- Mfr. No.: T4074-0025
- Finish: Black
- Height: 2.24"
- Length: 5.35"
- Scope Tube Diameter: 34mm
- Style: Clamp-On
- Delivery weight: 0.44kg
- Shipping height: 61mm
- Shipping width: 88mm
- Shipping length: 203mm

Table of Contents

- Startpage
- Safety Instruction Guide for ADJUSTABLE INCLINATION MOUNT ERATAC
- About Us

Safety Instruction Guide for ADJUSTABLE INCLINATION MOUNT ERATAC

Introduction

Thank you for choosing the ADJUSTABLE INCLINATION MOUNT ERATAC for your 34mm scope. This guide provides essential safety instructions and guidelines to ensure the safe and effective use of your product. Please read this document carefully before installation and usage.

General Safety Guidelines

- Ensure that all users of the product are aware of the following safety guidelines:
 - This product is designed for use with rifles and scopes. It should only be used for its intended purpose.
 - Always handle firearms and accessories with care. Follow all safety protocols for firearm handling.
 - Keep the product out of reach of children and vulnerable individuals.
 - Inspect the mount regularly for signs of wear or damage. Do not use if any components are damaged.
 - Ensure that the mount is securely attached before use to prevent accidents.

Specific Safety Precautions for Use

- When using the ADJUSTABLE INCLINATION MOUNT ERATAC, observe the following precautions:
 - Always wear appropriate eye protection when shooting.
 - Ensure that the firearm is pointed in a safe direction at all times.
 - Avoid using the mount in adverse weather conditions that may affect performance.
 - Do not exceed the recommended weight limit for the mount.
 - Make sure that all screws and bolts are tightened according to the manufacturer's specifications.
 - Be aware of the recoil from the firearm and ensure that the mount can withstand it.

Instructions for Installation and Usage

Installation

1. Prepare the Mount:

- Unpack the mount and ensure all components are included.
- Check for any visible damage before installation.

2. Attach the Mount to the Rifle:

- Align the mount with the rifle's rail system.
- Secure the mount using the provided screws or bolts. Ensure they are tightened properly.

3. Adjust the Inclination:

- Set the inclination of the mount in steps of 10 from 0 to 70 MOA or in steps of 5 between 0 to 20 mrad/MIL as needed.
- Use the lever or nut system to make adjustments.

4. Attach the Scope:

- Place the 34mm scope onto the mount.
- Secure the scope using the provided rings and ensure they are tightened according to

specifications.

5. Final Checks:

- Check that all components are securely fastened.
- Ensure the scope is properly aligned and that the mount is stable.

Usage

- When using the rifle equipped with the mount:
 - Always perform a preshooting check to ensure all components are secure.
 - Adjust the scope as needed for optimal sighting.
 - After shooting, inspect the mount and scope for any signs of movement or damage.

Disposal Instructions

- Dispose of the product in accordance with local regulations.
- Do not dispose of the product in regular household waste.
- Contact your local waste management authority for proper disposal methods.

Contact Information for Further Support

- For safety inquiries or additional support, please contact the manufacturer or your local distributor.
Ensure you have the product details available for reference.

Following these safety instructions will help ensure a safe and enjoyable experience with your ADJUSTABLE INCLINATION MOUNT ERATAC. Always prioritize safety when handling firearms and their accessories. Thank you for your attention to these important guidelines.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk