


LOCK-N-LOAD AP SHELL PLATE RETAINER SPRING - 3 PACK

[Reloading](#) > [Reloading Presses](#) > [Progressive Presses](#)

LOCK-N-LOAD AP SHELL PLATE RETAINER SPRING - 3 PACK

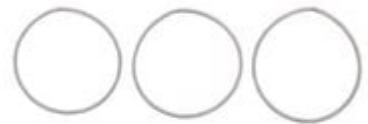

Attributes

- Name: [LOCK-N-LOAD AP SHELL PLATE RETAINER SPRING - 3 PACK](#)
- Manufacturer: [HORNADY](#)
- Product no.: 749009852
- Mfr. No.: 392370
- Delivery weight: 0.023kg
- Shipping height: 13mm
- Shipping width: 46mm
- Shipping length: 150mm
- UPC: 090255923704

Item details

Made in USA

Table of Contents

- Startpage
- LOCKNLOAD AP SHELL PLATE RETAINER SPRING 3 PACK Safety Instruction Guide
- About Us

LOCKNLOAD AP SHELL PLATE RETAINER SPRING 3 PACK Safety Instruction Guide

Introduction

Thank you for purchasing the LOCKNLOAD AP SHELL PLATE RETAINER SPRING 3 PACK by HORNADY. This product is designed to enhance the functionality of your progressive press. Please read this safety instruction guide carefully to ensure safe usage and compliance with the EU General Product Safety Regulation (GPSR).

General Safety Guidelines

- Ensure the product is used only for its intended purpose.
- Keep the product out of reach of children and vulnerable individuals.
- Regularly inspect the product for any signs of wear or damage.
- Do not modify or attempt to repair the product yourself.
- Report any unsafe products or incidents to the relevant authorities.
- Check the EU Safety Gate platform for any recall updates.

Specific Safety Precautions for Use

- Always wear appropriate safety gear, such as eye protection, when using the product.
- Ensure that the progressive press is turned off and disconnected from power before installation or maintenance.
- Handle the springs with care to avoid injury from unexpected release or tension.
- Store the product in a dry and safe location to prevent accidental damage or injury.
- Follow the manufacturer's recommendations for use and maintenance.

Instructions for Installation and Usage

Installation

1. Preparation

- Ensure that your workspace is clean and organized.
- Gather all necessary tools for installation.

2. Remove Old Springs

- Disconnect your progressive press from the power source.
- Carefully remove any existing shell plate retainer springs from the press.

3. Install New Springs

- Take one of the new LOCKNLOAD AP SHELL PLATE RETAINER SPRINGS from the pack.
- Align the spring with the designated slot on the progressive press.
- Ensure that the spring is seated properly and securely.

4. Test Installation

- Gently pull on the spring to ensure it is firmly in place.
- Reconnect the power to the progressive press and perform a test run without any materials to ensure proper functionality.

Usage

- Use the LOCKNLOAD AP SHELL PLATE RETAINER SPRING only with compatible shell plates.
- Follow the manufacturer's guidelines for the operation of your progressive press.
- Regularly check the functionality of the springs during use.

Disposal Instructions

- Dispose of the product in accordance with local regulations for nonhazardous materials.
- Do not dispose of the product in household waste. Instead, consider recycling options if available.

Contact Information for Further Support

For any questions or concerns regarding the LOCKNLOAD AP SHELL PLATE RETAINER SPRING 3 PACK, please refer to the manufacturer's website or contact their customer support for assistance.

By following these safety instructions, you can ensure a safe and effective experience with your LOCKNLOAD AP SHELL PLATE RETAINER SPRING 3 PACK. Thank you for your attention to safety and compliance.

About Us

Brownells Česká republika

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.cz