

EXTRACTOR SPRING - SAVAGE EXTRACTOR SPRING

[Rifle Parts](#) > [Bolt Parts](#) > [Extractor Parts](#) > [Extractor Springs](#)

FITS: 110/111/112/112BT Top Loading; 210F/FT Slug Gun, 12

EXTRACTOR SPRING



Attributes

- Name: [SAVAGE EXTRACTOR SPRING](#)
- Manufacturer: [SAVAGE](#)
- Product no.: 855000074
- Mfr. No.: 100257
- Model: 110,111,112,210
- Weapon type: Savage Arms
- Delivery weight: 0.005kg
- Shipping width: 83mm
- Shipping length: 146mm

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [Safety Instructions for EXTRACTOR SPRING SAVAGE EXTRACTOR SPRING](#)
- [About Us](#)

Safety Instructions for EXTRACTOR SPRING SAVAGE EXTRACTOR SPRING

Introduction

Thank you for choosing the EXTRACTOR SPRING SAVAGE EXTRACTOR SPRING. This product is designed for use in Savage Arms firearms models 110, 112, 111, and 210. To ensure safe operation and compliance with the EU General Product Safety Regulation (GPSR), please read this safety instruction guide carefully.

General Safety Guidelines

- Always handle firearms and their components with care.
- Ensure that the product is used only for its intended purpose.
- Keep the product out of reach of children and unauthorized users.
- Regularly inspect the product for signs of wear or damage before use.
- Report any unsafe products or accidents to the relevant authorities.
- Stay informed about recall updates through the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Ensure that the firearm is unloaded before installing or replacing the extractor spring.
- Wear appropriate safety gear, such as safety glasses, when handling firearms.
- Do not attempt to modify or alter the extractor spring in any way.
- If you experience any difficulties during installation, consult a qualified gunsmith.
- Be aware of the specific model compatibility (110, 112, 111, 210) to avoid improper installation.

Instructions for Installation and Usage

1. Preparation:

- Ensure the firearm is completely unloaded.
- Gather necessary tools, including a screwdriver and pliers.

2. Installation Steps:

- Remove the bolt from the firearm according to the manufacturer's instructions.
- Locate the extractor spring within the bolt assembly.
- Carefully remove the old extractor spring using pliers, if necessary.
- Insert the new EXTRACTOR SPRING into the designated slot, ensuring it is seated properly.
- Reassemble the bolt and reinsert it into the firearm.

3. PostInstallation Check:

- Test the functionality of the extractor by cycling the action of the firearm.
- Ensure that the extractor operates smoothly and securely.

Disposal Instructions

- Dispose of the product in accordance with local regulations regarding firearm parts.
- Do not dispose of the product in household waste.
- Consider recycling options for metal components where applicable.

Contact Information for Further Support

For any inquiries regarding safety concerns or product information, please contact the manufacturer or designated support services in your region.

Thank you for your attention to these safety instructions. Your safety and the safe operation of your firearm are our top priorities.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk