

BERETTA 92/96 13 LB RECOIL SPRING - WOLFF 13 LB. RECOIL SPRING

[Handgun Parts](#) > [Recoil Parts](#) > [Recoil Springs](#)

For optimum reliability with hardball and hot handloads. Improves overall function by matching the spring to the specific loads being fired. 13lb., factory standard weight, recoil spring only.



Attributes

- Name: [WOLFF 13 LB. RECOIL SPRING](#)
- Manufacturer: [WOLFF](#)
- Product no.: 969000141
- Mfr. No.: 40613
- Model: 92
- Pounds: 13 lbs
- Weapon type: Beretta
- Delivery weight: 0.045kg
- Shipping height: 3mm
- Shipping width: 86mm
- Shipping length: 226mm

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [Safety Instruction Guide for BERETTA 92/96 13 LB Recoil Spring](#)
- [About Us](#)

Safety Instruction Guide for BERETTA 92/96 13 LB Recoil Spring

Introduction

Thank you for choosing the BERETTA 92/96 13 LB Recoil Spring manufactured by WOLFF. This guide provides essential safety instructions to ensure the safe use and handling of your recoil spring. Please read this document carefully to understand the safety precautions, installation procedures, and proper disposal methods.

General Safety Guidelines

- Always ensure that the firearm is unloaded before performing any maintenance or installation of parts.
- Store the recoil spring in a safe, dry place away from children and unauthorized users.
- Regularly inspect the recoil spring for signs of wear or damage before use.
- Follow all local laws and regulations regarding the use and modification of firearms.
- Report any unsafe products or accidents to the relevant authorities.

Specific Safety Precautions for Use

- Use only with the specified firearm model (Beretta 92/96).
- Ensure that the recoil spring is rated for the specific loads you intend to fire (13 lbs for factory standard).
- Avoid using the recoil spring with ammunition that exceeds the recommended specifications.
- If you experience any malfunctions or irregularities while using the recoil spring, cease use immediately and consult a qualified gunsmith.
- Keep the recoil spring and associated firearm parts clean and free from debris to ensure optimal performance.

Instructions for Installation and Usage

1. Preparation:

- Ensure the firearm is unloaded and pointed in a safe direction.
- Gather necessary tools, including a screwdriver and cleaning cloth.

2. Removing the Old Recoil Spring:

- Disassemble the firearm according to the manufacturer's instructions.
- Carefully remove the old recoil spring from its housing.
- Inspect the old spring for signs of wear or damage.

3. Installing the New Recoil Spring:

- Take the new BERETTA 92/96 13 LB Recoil Spring out of its packaging.
- Insert the new recoil spring into the housing, ensuring that it is seated properly.
- Reassemble the firearm according to the manufacturer's instructions.

4. Testing:

- Once reassembled, perform a function check to ensure the firearm operates correctly.
- If applicable, conduct a test fire in a safe environment to verify proper operation.

Disposal Instructions

- Dispose of the old recoil spring in accordance with local regulations regarding metal waste.
- Do not dispose of the recoil spring in regular household waste.
- Consider recycling the old spring if facilities are available in your area.

Contact Information for Further Support

For any questions or concerns regarding the use of the BERETTA 92/96 13 LB Recoil Spring, please consult the manufacturer's website or contact their customer support.

By following these safety instructions, you can help ensure a safe and enjoyable experience with your new recoil spring. Always prioritize safety and compliance with local laws when handling firearms and related accessories.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk