

SD Card Reader

[Shooting Accessories](#) > [Range Gear](#) > [Cameras](#)

Ability to read SD and Micro SD cards

NO IMAGE
AVAILABLE

Attributes

- Name: [BOG SD Card Reader](#)
- Manufacturer: [BOG](#)
- Product no.: EU1001775
- Mfr. No.: 1131488
- Delivery weight: 0.05kg
- Shipping height: 66mm
- Shipping width: 13mm
- Shipping length: 178mm
- UPC: 661120103318

Table of Contents

- [Startpage](#)
- [BOG SD Card Reader Safety Instructions](#)
- [About Us](#)

BOG SD Card Reader Safety Instructions

Introduction

Thank you for choosing the BOG SD Card Reader. This guide provides important safety instructions and guidelines to ensure the safe use of the product. Please read this document carefully before using the SD Card Reader.

General Safety Guidelines

- Ensure the product is used only for its intended purpose: reading SD and Micro SD cards.
- Keep the SD Card Reader away from moisture, heat, and direct sunlight.
- Avoid dropping or subjecting the device to strong impacts, as this may cause damage.
- Do not attempt to disassemble or repair the SD Card Reader yourself.
- Always handle the device with clean, dry hands to avoid electrical hazards.
- Use the product only with compatible SD and Micro SD cards as specified by the manufacturer.

Specific Safety Precautions for Use

- Keep the SD Card Reader out of reach of children and pets to prevent accidental injury or damage.
- If the device shows any signs of damage, such as frayed cables or cracks, discontinue use immediately.
- Do not expose the SD Card Reader to extreme temperatures or humidity levels.
- Avoid using the device in environments with high electromagnetic interference, as this may affect performance.
- When inserting or removing SD or Micro SD cards, do so gently to avoid damaging the card or the reader.

Instructions for Installation and Usage

1. Installation:

- Connect the BOG SD Card Reader to your computer or compatible device using the provided USB cable.
- Ensure the connection is secure and the device is recognized by your system.

2. Using the SD Card Reader:

- Insert the SD or Micro SD card into the appropriate slot on the reader.
- Wait for your computer or device to recognize the card. This may take a few moments.
- Access the files on the card through your computer's file management system.
- When finished, safely eject the SD or Micro SD card before removing it from the reader to prevent data loss.

3. Removing the Device:

- After use, disconnect the SD Card Reader from your computer or device.
- Store the reader in a cool, dry place when not in use.

Disposal Instructions

- Dispose of the BOG SD Card Reader in accordance with local electronic waste disposal regulations.
- Do not dispose of the device in regular household waste.
- Consider recycling the product if possible to minimize environmental impact.

Contact Information for Further Support

For any safety inquiries or support related to the BOG SD Card Reader, please refer to the manufacturer's official website or customer service channels.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk