

SEATERHEADS - TRIEBEL Seaterhead - Caliber 9,3/.366 - Type: MJG

[Reloading](#) > [Reloading Dies](#) > [Neck Size Bushings](#)

Accessory for Seater with Crimp and Bench-Rest-Seaters from Triebel.

You will find further informations in the manual.

[The manual can be found here](#)

NO IMAGE
AVAILABLE

Attributes

- Name: [TRIEBEL Seaterhead - Caliber 9,3/.366 - Type: MJG](#)
- Manufacturer: [TRIEBEL](#)
- Product no.: EU2008381
- Mfr. No.: 3000187
- Diameter (in): 0.366
- Delivery weight: 0.015kg
- Shipping height: 15mm
- Shipping width: 15mm
- Shipping length: 30mm

Table of Contents

- Startpage
- Safety Instruction Guide for TRIEBEL SEATERHEADS TRIEBEL Seaterhead Caliber 9,3/.366 Type: MJG
- About Us

Safety Instruction Guide for TRIEBEL SEATERHEADS TRIEBEL Seaterhead Caliber 9,3/.366 Type: MJG

Introduction

Thank you for choosing the TRIEBEL Seaterhead for your reloading needs. This guide provides important safety instructions, usage guidelines, and disposal instructions to ensure safe and effective use of the product. Please read this manual carefully before using the seaterhead.

General Safety Guidelines

- Always use the TRIEBEL Seaterhead in accordance with the manufacturer's instructions.
- Ensure that your working environment is clean, dry, and free from distractions.
- Keep the product out of reach of children and vulnerable individuals.
- Regularly inspect the seaterhead for any signs of wear or damage before use.
- In case of any malfunction or damage, discontinue use immediately and contact a qualified technician.

Specific Safety Precautions for Use

- **Potential Hazards:**
 - Risk of injury from improper handling or use.
 - Potential for accidental discharge if not used correctly.
- **Avoiding Hazards:**
 - Always ensure the firearm is unloaded before attaching or detaching the seaterhead.
 - Use appropriate personal protective equipment (PPE), such as safety glasses and gloves, while operating the seaterhead.
 - Do not exceed the recommended specifications for the seaterhead, including caliber and diameter.
 - Ensure that the seaterhead is securely attached to the reloading press before use.

Instructions for Installation and Usage

• Installation:

1. Ensure the reloading press is clean and free of debris.
2. Remove any existing seater or attachment from the press.
3. Align the TRIEBEL Seaterhead with the mounting point on the reloading press.
4. Securely fasten the seaterhead using the appropriate tools, ensuring it is tightly fitted.
5. Doublecheck the installation to ensure there are no loose parts.

• Usage:

1. Prepare your reloading materials according to the specifications for your caliber.
2. Adjust the seating depth as needed according to your reloading requirements.
3. Load the cartridge case into the press and ensure it is positioned correctly.
4. Operate the press smoothly and steadily to seat the bullet into the cartridge.
5. Inspect the completed cartridge for proper seating and any signs of damage.

Disposal Instructions

- Dispose of the TRIEBEL Seaterhead and any associated materials in accordance with local regulations.
- Do not dispose of the product in regular household waste.

- If the product is damaged or no longer usable, contact your local waste management authority for proper disposal methods.

Contact Information for Further Support

For any questions or concerns regarding the TRIEBEL Seaterhead, please refer to the manufacturer's website or customer support. Ensure you have the product information ready for assistance.

Thank you for your attention to these safety instructions. Your safety is our priority, and we wish you a successful reloading experience with the TRIEBEL Seaterhead.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk