

Ball Bearing Roller handle for Hornady (Aluminum)

[Reloading](#) > [Reloading Presses](#) > [Reloading Press Accessories](#)

This Roller handle gives you an entirely new "feel".

A roller handle reduces operator fatigue during long reloading sessions and makes primer seating easier.

Angled model fits the Hornady reloading press machine.

Extremly easy to assemble.

Just unscrew your ball and screw this aluminum ball bearing roller handle.

Extremly low friction thanks to integrated two ball bearings.

Finger grooves also improve your grip.

NO IMAGE
AVAILABLE

Roler is made from Aluminum (Red anodized).

Screw ball is made from stell.

Thread-Lock for mounting is included.

[Installation instructions can be found here](#)

Attributes

- Name: [ARMANOV Ball Bearing Roller handle for Hornady \(Aluminum\)](#)
- Manufacturer: [ARMANOV](#)
- Product no.: EU2009939
- Mfr. No.: BBDRHHOR-RE
- Colour: Red
- Material: Aluminum
- Delivery weight: 0.286kg
- Shipping height: 35mm
- Shipping width: 35mm
- Shipping length: 150mm
- EAN: 0650728064466

Table of Contents

- Startpage
- Safety Instruction Guide for ARMANOV Ball Bearing Roller Handle for Hornady (Aluminum)
- About Us

Safety Instruction Guide for ARMANOV Ball Bearing Roller Handle for Hornady (Aluminum)

Introduction

Thank you for choosing the ARMANOV Ball Bearing Roller Handle for your Hornady reloading press. This product is designed to enhance your reloading experience by reducing operator fatigue and improving efficiency. Please read this safety instruction guide carefully to ensure safe and effective use of the product.

General Safety Guidelines

- Always follow the manufacturer's instructions for use and installation.
- Inspect the product before use for any signs of damage or wear.
- Keep the product out of reach of children and vulnerable individuals.
- Use the product only for its intended purpose.
- Report any unsafe conditions or incidents to the relevant authorities.
- Stay informed about product recalls by checking the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Ensure that your reloading press is properly secured before installing the roller handle.
- Do not exceed the recommended load capacity of the handle.
- Avoid using excessive force when operating the handle to prevent injury or damage.
- Wear appropriate personal protective equipment (PPE), such as safety glasses, while using the reloading press.
- Do not use the roller handle if it is damaged or malfunctioning.
- Be cautious of sharp edges when handling the aluminum components.

Instructions for Installation and Usage

1. Installation Instructions:

- Unscrew the existing ball handle from your Hornady reloading press.
- Align the threaded end of the ARMANOV ball bearing roller handle with the mounting point on the press.
- Screw the roller handle securely into place.
- Ensure that the handle is firmly attached before use.

2. Usage Instructions:

- Grip the roller handle firmly with your hand.
- Move the handle in a smooth and controlled manner to operate the reloading press.
- Avoid sudden or jerky movements to maintain control and prevent accidents.

Disposal Instructions

- Dispose of the product in accordance with local regulations.
- Do not dispose of the product in household waste.
- Consider recycling the aluminum components where facilities are available.

Contact Information for Further Support

For any safety inquiries or support regarding the ARMANOV Ball Bearing Roller Handle, please refer to the manufacturer's contact information provided with your product. Ensure you have your product details ready for a more efficient response.

By following these safety instructions, you can ensure a safe and enjoyable experience with your ARMANOV Ball Bearing Roller Handle for Hornady. Thank you for your attention to safety.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk