

Trigger Case RIGHT GY

[Shooting Accessories](#) > [Duty Gear](#)

You've been carrying a spare trigger for years and the box is always too bulky for your rifle case or range bag. The OBi Trigger Case fixes that. This 3D-printed case is barely larger than your trigger, sliding into your gear with zero wasted space while keeping the spare part snug, protected, and easy to find.

Designed for shooters who actually use their kit, the OBi Trigger Case eliminates the annoying bulk of typical packaging so your spare trigger rides securely in your rifle case, range bag, or pack pocket — without rattling or getting lost. If you carry a spare trigger, this is a must-have.

NO IMAGE
AVAILABLE

Attributes

- Name: [Trigger Case RIGHT GY](#)
- Manufacturer: [OBI SYSTEMS](#)
- Product no.: EU2015580
- Mfr. No.: OBi08001-GY
- Colour: Gray
- Delivery weight: 1kg
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm
- UPC: 767637841375

Table of Contents

- Startpage
- OBi Trigger Case Safety Instruction Guide
- About Us

OBi Trigger Case Safety Instruction Guide

Introduction

Thank you for choosing the OBi Trigger Case. This guide provides important safety instructions and guidelines to ensure the safe use of your new product. Please read this manual carefully before using the OBi Trigger Case, and keep it for future reference.

General Safety Guidelines

- Ensure that the OBi Trigger Case is used only for its intended purpose: to securely store and transport spare triggers.
- Always inspect the case before use to ensure it is free from damage or defects.
- Keep the OBi Trigger Case out of reach of children and pets to prevent accidents.
- Do not expose the case to extreme temperatures or harsh chemicals, as this may compromise its integrity.
- If you notice any signs of wear or damage, discontinue use immediately and replace the product.

Specific Safety Precautions for Use

- Always securely close the case to prevent the spare trigger from falling out during transport.
- Avoid placing heavy items on top of the OBi Trigger Case, as this may deform the case and affect its functionality.
- When storing the case in a bag or other gear, ensure it is positioned in a way that prevents crushing or excessive pressure.
- Be cautious when handling the case to avoid dropping it, which could lead to damage or injury.

Instructions for Installation and Usage

1. Opening the Case

- Gently press the latch or button to open the OBi Trigger Case.
- Ensure that the case opens smoothly without excessive force.

2. Inserting the Trigger

- Place your spare trigger inside the case, ensuring it fits snugly.
- Check that the trigger is securely held in place and does not move around.

3. Closing the Case

- Close the case firmly until you hear a click, indicating it is securely locked.
- Doublecheck that the case is completely closed before transporting.

4. Transporting the Case

- Store the OBi Trigger Case in your rifle case, range bag, or pack pocket.
- Ensure that it is not exposed to sharp objects or excessive pressure during transport.

5. Removing the Trigger

- Open the case as instructed and carefully remove the trigger.
- Inspect the trigger for any signs of wear or damage before use.

Disposal Instructions

- The OBi Trigger Case is made from recyclable materials. Please dispose of it in accordance with local recycling regulations.
- If the case is damaged or no longer usable, dispose of it as general waste, ensuring it does not pose a risk to the environment.

Contact Information for Further Support

For any questions or concerns regarding the OBi Trigger Case, please refer to the manufacturer's contact information provided on the packaging or the official website.

Thank you for your attention to these safety instructions. Enjoy using your OBi Trigger Case, and stay safe!

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk